


10-Key CCT Zigbee 3.0 Remote Controller

Model No.: R2(WZS)

10-key/Zigbee 3.0/Wireless remote 30m distance/CR2032 battery

Features

- Apply to Zigbee 3.0 dual color LED controller or driver.
- Built-in Tuya Zigbee 3.0 remote module, supports scenario linkage and one-click execution.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.
- White & Black available.

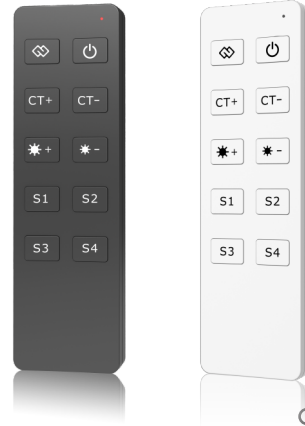


CE RoHS EMC LVD RED

Technical Parameters

Input and Output		Safety and EMC		Environment	
Output signal	Zigbee 3.0	EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4	Operation temperature	Ta: -30°C ~ +55°C
Working voltage	3VDC(CR2032)	Safety standard(LVD)	EN 62368-1:2020+A11:2020	Package	
Working current	<1.5mA	Radio Equipment(RED)	ETSI EN 300 328 V2.2.2	Size	L138x W50 x H22mm
Standby current	<16µA	Certification	CE,EMC,LVD,RED	Gross weight	0.064kg
Standby time	1 year			Warranty	
Remote distance	30m(Barrier-free space)			Warranty	5 years


Mechanical Structures and Installations

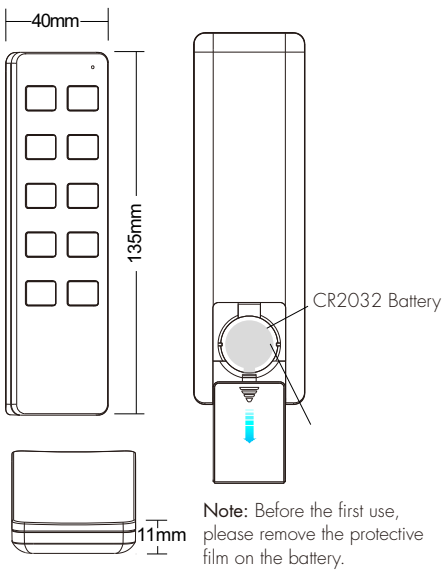

Back holder


Two options are offered for selection, please fix the remote' back holder on the wall with two screws, or adhere the remote' back holder to the wall with paster.

1. Back holder without magnet

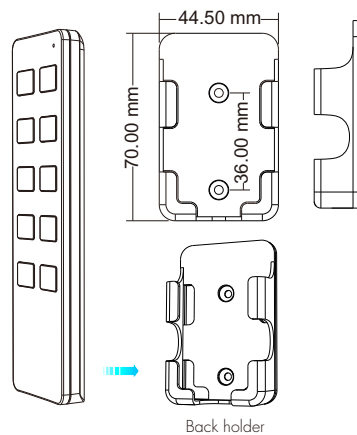


2. Back holder with magnet

(The remote need to be customized with built-in magnets)

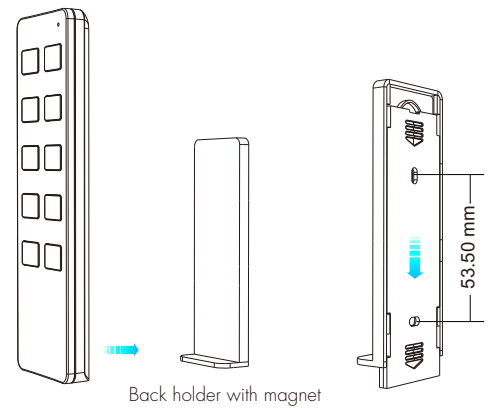

Key function

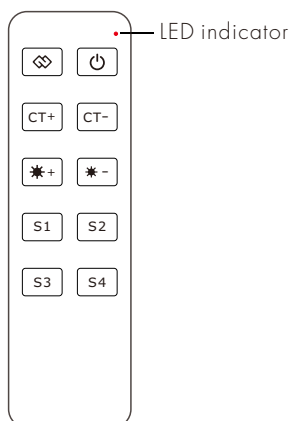

- : Turn on/off light.
- : Network pairing
- : Adjust color temperature, short press 11 levels, 10% step.
- : Adjust brightness, short press 11 levels, 10% step.
- : Short press to recall the scene 1-4.

Before use the remote, please edit the scene setting through Tuya APP firstly.

App Operating Instructions

1. Network pairing


- Download the Tuya APP and register an account, search and add the Tuya Zigbee gateway device.
- Press and hold the "Network pairing" button until the LED indicator light flashes.
Under the gateway, you can find WZS-Scene Panel device in Tuya APP.
After successful network pairing, the indicator light will be on for 2 seconds and then off.
- Under the gateway, search and add one or more ZBS-CCT light devices.
- Remote unpairing: Delete the WZS-Scene Panel device from the Tuya APP.

2. Remote association and scene settings

There are 8 scenes in the Tuya APP, which can be set to lighting scenes or linkage scenes.
Lighting scene is used for the overall control of multiple lamps, like the light adjustment of the entire room.
Linkage scene is used for linkage control of different equipment, such as lamps and curtains on and off together.


Example 1, set scene 1 for synchronous light control of the whole room:

- (1) Select scene 1 and open the lighting scene settings.
- (2) You can change the scene name, add one or more devices, adjust brightness and color temperature, then save it.
- (3) After successful setting, you can use the remote to control these lamps directly.

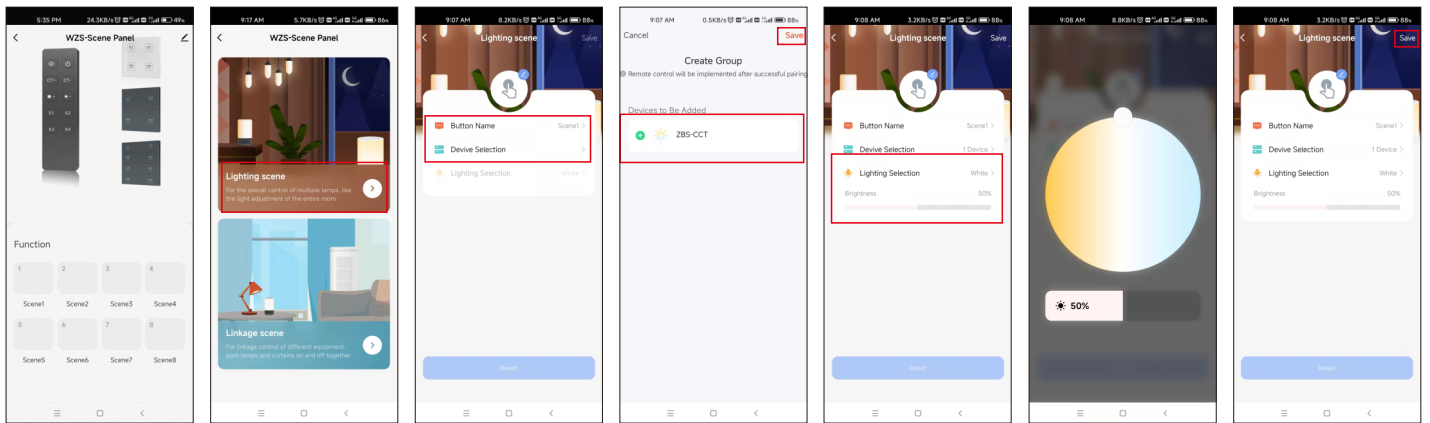

Example 2, set scene 2 to set up a scenario where different lamps or curtains are controlled together with different color or on/off state.

- (1) Select Scene 2 and open the linkage scene settings.
- (2) You can change the scene name, add "one-click execution" tasks, select the devices that need to be linked, save the required functions, such as ON/OFF, mode, brightness and color temperature.
- (3) After successful setup, you can use the remote to directly control all linked devices to the desired scene.

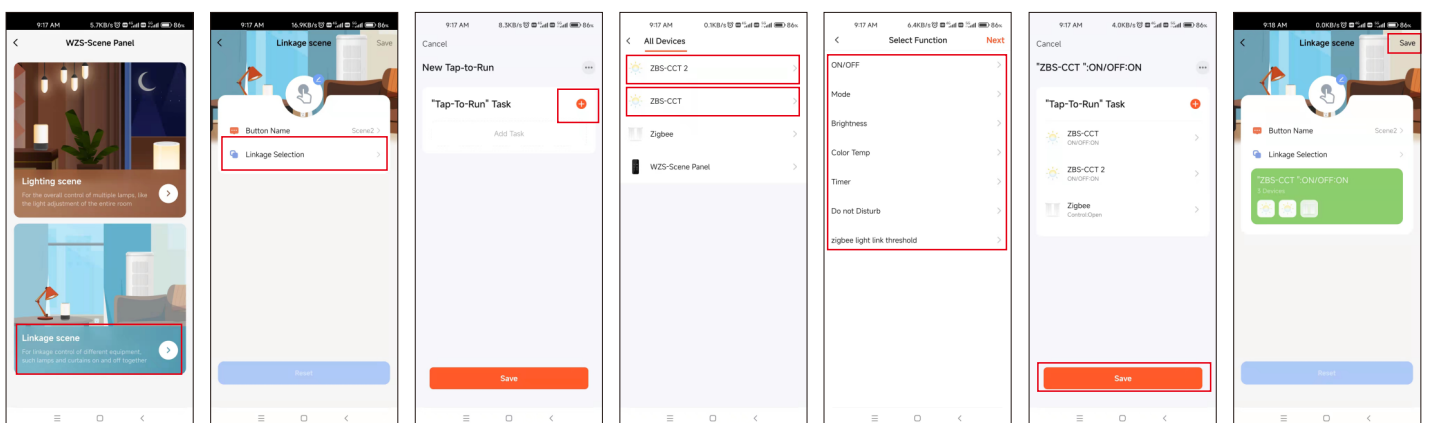

Note:

- The scene 1-4 in Tuya APP is correspond to the scene 1-4 key on the remote.
- To delete the scene function, you can select "Reset" in the scene settings.

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.
A long time without the remote control, remove the battery.
When remote distance becomes smaller and insensitive, replace the battery.
3. Gently handle remote, beware of falling.
4. For indoor and dry location use only.