# Touch Wheel RF Remote Controller

# Model No.: RS1/RS2/RS6

 $13\hbox{-Key}/4\hbox{\ Zone/Touch\ color\ wheel/Wireless\ remote\ 30m\ distance/AAAx2\ battery/Magnet\ stuck\ fix}$ 







RS 1 4 Zone Dimming

RS2 RS6 4 Zone CCT 4 Channel Dimming

## **Features**

- Apply to single color or dual color LED controller.
- Ultra sensitive color adjustment touch wheel.
- Each remote can match one or more receiver.
- AAAx2 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be stuck on back holder.

### **Technical Parameters**

RF(2.4GHz)
3VDC(AAAx2)
<5mA
< 10µA
1 year
30m(Barrier-free space)


Environment	
Operation temperature	Ta: -30°C ~ +55°C
IP rating	IP20

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED

CE RoHS emc IVD RED

Warranty	
Warranty	5 years
Weight	
Netweight	57g
Gross weight	111g

#### Mechanical Structures and Installations

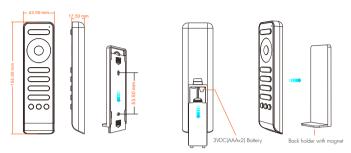

### To fix the remote, three options are offered for selection:

Option 1: stuck the remote on any metal surfaces directly.

Option 2: fix the remote' back holder on the wall with two screws.

Option 3: adhere the remote' back holder to the wall with paster.

### Operation

- When turn on light, the indicator display blue. when turn off light, the indicator display red.
- $\bullet$  When touch the color wheel, the indicator will display the same color.
- When press or touch operation is invalid (If the light is off), the indicator display red.
- To extend battery life, no touch or press key operation after a few seconds,
  the touch wheel will enter sleep state, you need press any key to make touch wheel quit sleep state.

# Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

## Use the controller's Match key

#### Match:

Short press match key,

immediately press zone on key of the remote. The LED indicator fast flash a few times

means match is successful.

#### Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

#### Use Power Restart

#### Match:

Switch off the power, then switch on power, repeat again. Immediately short press zone on key 3 times on the remote. The light blinks 3 times means match is successful.

#### Delete:

Switch off the power, then switch on power, repeat again. Immediately short press zone on key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

User Manual Ver 1.0.5





## Safety information

- 1. Read all instructions carefully before you begin this installation.
- When installing battery, pay attention to the battery positive and negative polarity.
  A long time without the remote control, remove the battery.
  When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.

User Manual Ver 1.0.5